



5 TIER ADJUSTABLE SHELF 1830H x 910W x 410Dmm

ITEM NO: GOSO14


Very Important: Unpack the unit and confirm that you have all the parts listed. Assemble the unit on a solid, level surface. Avoid carpet. You will need the assistance of a second person during assembly. **Safety tip:** For added safety and support we recommend you fix unit to a wall. **You will need the following:** Rubber mallet or a hammer.





A SAFETY TIP:

When assembling or installing this product wear protective gloves and eyewear.

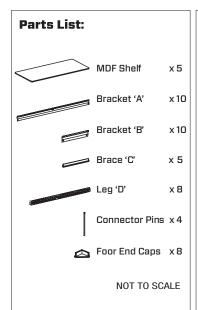


X 4 'D' A' Note: Keyhole

Place foot end caps onto the bottom of the 4 legs 'D'. Note upright position Place shelving bracket 'A' onto the legs 'D'. A rubber mallet can be used to lightly tap all brackets into the keyholes of the legs into place. Allow one keyhole free between the foot end cap and the shelving bracket.


Allow one keyhole free between the foot cap and the shelving bracket.

Step 2


Use shelf bracket 'B' for the side brackets using the shelf bracket from Step 1 as a guide for height. Allow 1 keyhole free from the ground as shown in the diagram. Use same shelving brackets for opposing sides as shown in the diagram. Place brace 'C' as shown.

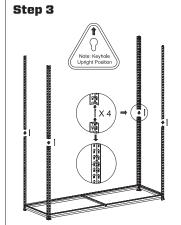


Place MDF board on bottom shelf to minimise buckling. Join the upper legs to the lower legs with the connector pins. Note upright position. Note: The legs are designed to sit directly on top of each other – don't overlap them. Handy Hint: Flathead screwdriver may be used to tap in connector pins.

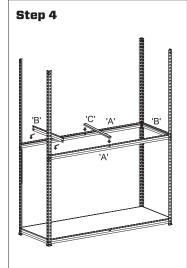


Fix brackets 'B' so that the top rivet sits on the upper legs and the bottom rivets sit on the lower legs. Repeat with brackets 'A', followed by brace 'C' as shown

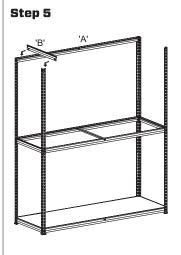

Fix brackets 'B' at the very top allowing room for the MDF board to sit flush against the legs. Repeat with brackets 'A'.

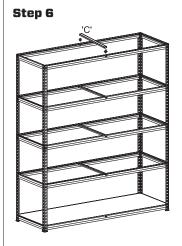

Apply remaining brackets as above to desired height. Ensure that braces 'C' are fixed to all shelves

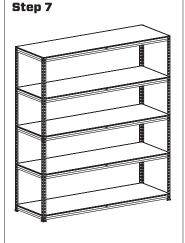

Place the MDF boards on shelves, ensure they are sitting flush against the edge of the shelf brackets

WARRANTY CONDITION

Any claim under this warranty must be made within 1 year of the date of purchase of the product. To make a claim under this warranty, take the product (with proof of purchase) to any Bunnings store (see www.bunnings.com.au for store locations). Pinnacle Hardware bears reasonable, direct expenses of claiming under the warranty. You may submit details and proof of purchase to our support centre for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use. This warranty is provided in addition to other rights and remedies you may have under law. Our goods come with guarantees that cannot be excluded under the Australian consumer law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications. This warranty is given by Pinnacle Hardware, ABN 87 614 496 196, 28 Hudson Court, Keysborough Vic 3173, 1800 349 776, Emils: sapport@pinnacle.net.au. New Zealand customers please contact HARCO (Harkness & Young Ltd), 09 27 64071, Email: sales@harknessyoung.co.nz. 'Pinnacle' is a trademark. @ Pinnacle Hardware. Suitable for model number GOS014.